


FLOODLIGHT USER MANUAL

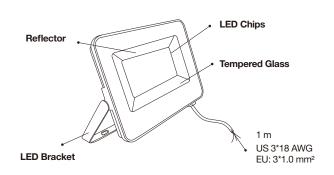

340007-DW-US


100 W / 110-130 V~ / 9000 lm / 5000 K / 60 Hz / 120° / IP65 / -25 °C~45 °C / -13 °F~113 °F

340008-DW-US


150~W / $110\text{-}130~V\sim$ / 13400~Im / 5000~K / 60~Hz / 120° / IP65 / $-25~^{\circ}C\sim45~^{\circ}C$ / $-13~^{\circ}F\sim113~^{\circ}F$


340009-DW-US


200 W / 110-130 V~ / 17100 lm / 5000 K / 60 Hz / 120° / IP65 / -25 °C~45 °C / -13 °F~113 °F

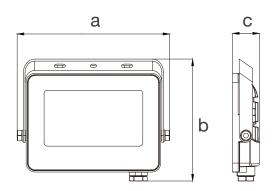


	а	b	С
100 W	325 mm / 9.75 in	234 mm / 7.02 in	38 mm / 1.14 in
150 W	385 mm / 11.55 in	282 mm / 8.46 in	38 mm / 1.14 in
200 W	420 mm / 12.60 in	314 mm / 9.42 in	42 mm / 1.26 in

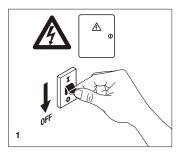


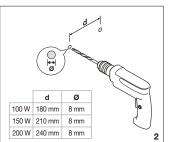


 




 

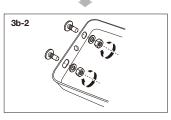


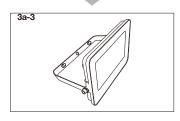



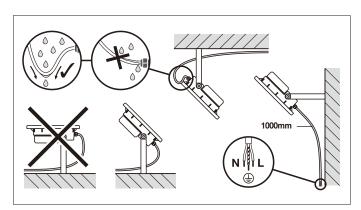



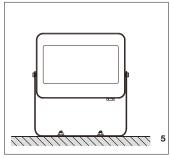







Conforms to UL Std. 1598 Certified to CSA Std. C22.2#250.0

- 1. This product is class I and must be earthed.
- 2. Please switch off mains supply before installation.
- 3. Ensure all seals are intact and operational after installation or maintenance.
- 4. Do not touch the light while in use or just after use to avoid being burnt.
- 5. Do not cover the light.
- 6. Keep the light away from flammable and explosive materials.
- 7. Any damaged or damaged parts should be replaced as soon as possible.
- 8. The LEDs cannot be replaced, you need to replace the entire fixture when the light no longer works.
- 9. INSTALLATION OR ASSEMBLY: CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR
- Q: The lamp does not work?
- A: Please make sure the lamp switch is on, powered, make sure the plug is not loose.

Home EVER Inc.

1810 E Sahara Ave Suite 1526, Las Vegas, NV 89104, United States www.lepro.com +1 866-287-2558 cs.oc@lepro.com Made in China

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.